



HP Photosmart c4780 Replacing the printer motherboard Replacement

Written By: garrett hall





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T10 Torx Screwdriver](#) (1)
-

Step 1 — Outer Shell Disassembly



- Lift the top cover of the scanner.
- Using a small plastic prying tool, carefully pry the plastic frame surrounding the glass from the printer hood.
- Pry the side piece from the printer hood.
- Pull the frame out.

Step 2



- Using a T10 screwdriver, unscrew the two screws that fasten the frame to the printer hood.

Step 3



- Pushing the clip behind the cover piece in, pull the cover piece outwards.

Step 4



 
- There are two screws under where the power button panel was and across the printer slider. Unscrew them with a T10 screwdriver.

Step 5




- Pull the printed circuit board from the main printer body.
- Unplug the small ribbon cable from the circuit board.

Step 6

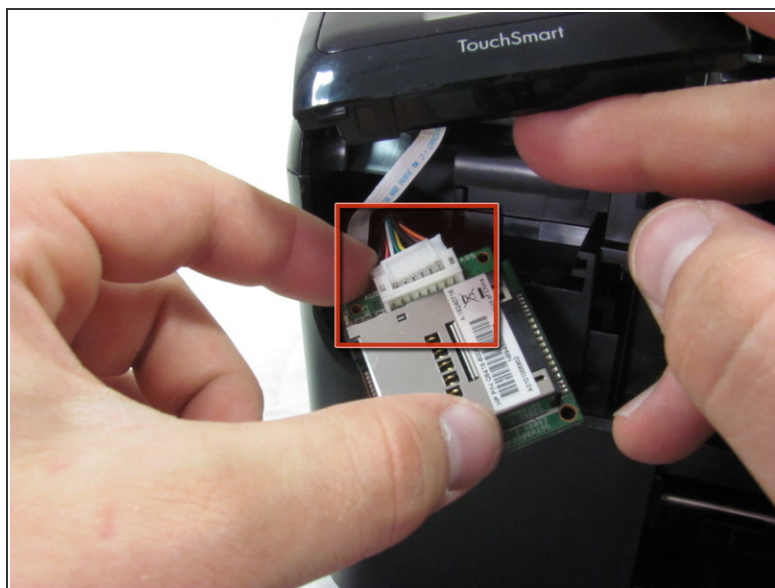

- Pull the memory card reader's circuit board out of its slot.
- Detach the wire harness.

Step 7

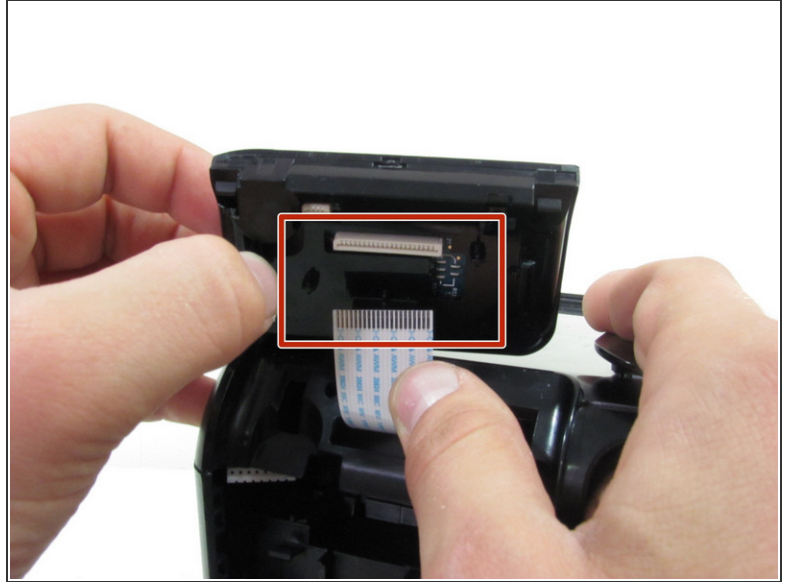

- Press the clip directly behind the TouchSmart panel.
 - Pull the clip to detach.
 - Disconnect the ribbon cable from the TouchSmart panel to detach from the main printer body.
- i** Do not hesitate to use force to remove the TouchSmart panel.

Step 8



 
- Gripping the printer hood, pull upward.

Step 9 — Replacing the printer motherboard



- Remove the three screws securing the mother board.

Step 10

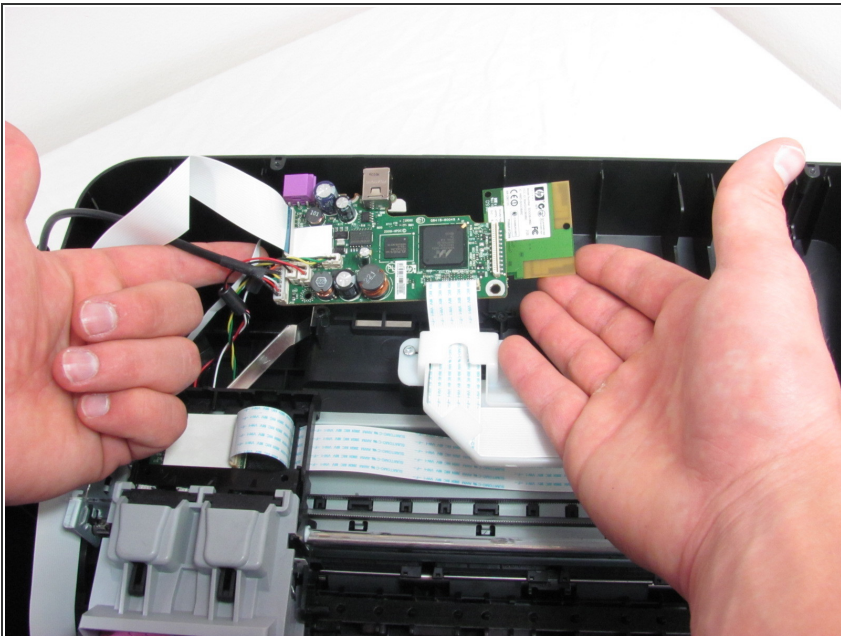

- Lift mother board out of the slot.

Step 11



- Remove the seven cables attached to the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 02:09:40 PM.